













Position	Part name	Qty
01-01	nut-M5	2
01-02 03 10 11 36 37	cylinder assy	1
01-02 03 36	piston assy	
01-02	piston pin	1
01-03	piston pin circlip	2
01-04	muffler cover	1
01-05	inner hexagon screws	4
01-06	muffler	1
01-07	muffler gasket	1
01-08	square-head bolt	2
01-09	inner hexagon screws	4
01-10	cylinder	1
01-11	cylinder gasket	1
01-12	intake pipe gasket	1
01-13	intake pipe	1
01-13A	inner hexagon screws	2
01-14	insulation pad	1
01-15	intake pipe bracket	1
01-16	intake pipe bracket gasket	1
01-17	intake flange nut	1
01-18	huide circle	1
01-19	double-ended stud	2
01-21 23 26	crankcase assy	1
01-20	oil seal	1
01-21	right crankcase	1
01-22	half-round key	1
01-23	paper pad	1
01-24	located pin	3
01-25	bearing	2
01-26	left crankcase	1
01-27	crankcase assy	1
01-28	circlip	1
01-29	oil seal	1
01-30	screws	5
01-31	suction mouth	1
01-32	vacuum takeover spring	1
01-33	vacuum takeover	1
01-34	piston pin needle bearing	1
01-35	anti-friction pad	2
01-36	piston assy	1
01-37	piston ring	2
01-38	inner hexagon screws	2
02 1-13 and 25-27	starter assy	1
02-1	inner hexagon screws	4
02-2	starter cord	1
02-3	starter cover	1
02-4	small spacer	1
02-5	handle sheath	1
02-6	start handle	1

02-7	start coil spring	1
02-8	spring box	1
02-9	start sheave	1
02-10	big washer	1
02-11	inner hexagon screws	1
02-12	fairing	1
02-13	nut	1
02-14	flywheel	1
02-15	inner hexagon screws	2
02-16 17 24	igniter assy	1
02-16	igniter	1
02-17	igniter cap	1
02-18	inner hexagon screws	2
02-19	oil seal pressure plate	1
02-20	spark plug	1
02-21	inner hexagon screws	1
02-22	short flameout wire	1
02-23	off switch	1
02-24	long flameout switch line	1
02-25	small rope sheave	1
02-26	large spring gland	1
02-27	tapping screws	3
02-28	large coil spring	1
03-1 2	front handle assy	1
03-1	handle sheath	1
03-2	handle	1
03-3	cross-head tapping screws	4
03-4 5 7 8 13 14 20	fuel tank assy	1
03-4	handle cover	1
03-5	trigger	1
03-6	trigger torsion spring	1
03-7	trigger control arm	1
03-8	fuel tank	1
03-9	cross-head tapping screws	1
03-10	inner hexagon screws	1
03-11	spring pin	1
03-12	tower spring gland	1
03-13	long shock-absorbing seat	2
03-14	shock-absorbing spring	2
03-15	inner hexagon screws	2
03-16	dust-proof cover	2
03-17	double-head pin	1
03-18	dust-proof cover	3
03-19	cross-head tapping screws	3
03-20	short shock-absorbing seat	3
03-21	conical spring seat	1
03-22	conical spring	1
03-23	cross-head tapping screws	1
04-1	fuel tank cap	1
04-2	fuel tank cap gasket	1

04-3	fuel tank cap anti-drop plate	1
04-4	fuel filter assy	1
04-5	fuel pipe	1
04-6	balancer tube	1
04-7	balancer assy	1
04-8	throttle push rod	1
04-9	dust-proof block	1
04-10	inner hexagon screws	2
04-11	intake bend damping	1
04-12	intake elbow	1
04-13	double-head stud	1
04-14	carburetor assy	1
04-15	throttle lever	1
04-16	throttle rod sleeve	1
04-17	throttle lever seat	1
04-18	upper cover assy	1
04-19	inner hexagon screws	5
04-20	air filter	1
04-21	air filter cover	1
04-22	small cover	1
04-23 24	air filter lock nut assy	1
04-23	lock nut washer	1
04-24	air filter lock nut	1
05-1	oil tank cap	1
05-2	oil tank cover gasket	1
05-3	oil tank cover anti-drop plate	1
05-4	vent	1
05-5	vent circlip	1
05-6	vent filter screen	1
05-7	oil pipe	1
05-8	oil filter assy	1
05-9	oil outlet nozzle	1
05-10	oil pump	1
05-11	dust-proof filter	1
05-12	inner hexagon screws	2
05-13	oil pump cover	1
05-14	inner hexagon screws	3
05-15	clutch seat	1
05-16	clutch block	3
05-17	clutch tension spring	1
05-18	clutch gasket	1
05-19	clutch	1
05-20	sprocket	1
05-21	worm	1
05-22	needle bearing	1
06-1	guide chain block	1
06-2	double-head stud	2
06-3	oil outlet cover paper pad	1
06-4	oil outlet cover	1
06-5	inner hexagon screws	1

06-6	tension screw	1
06-7	tension block	1
06-8	stop piece	1
06-9	brake torsion spring	1
06-10	big washer	1
06-11	retaining ring 5	2
06-12	shock-absorbing rubber gasket	1
06-13	brake spring cap	1
06-14	cross-recessed tapping screws	3
06-15	limit pin	1
06-16	cross-recessed tapping screws	2
06-17	tension cover	1
06-18	guide chain block	1
06-19	brake band	1
06-20	oil baffle	1
06-21	brake spring	1
06-22	brake spring	1
06-23	brake lever	1
06-24	brake panel(right panel)	1
06-25	ring	1
06-26	nut M8	2
06-27	pin 3X10	2
06-28	secondary lever	1
06-29	main lever	1
06-30	baffle pin sleeve	1
06-31	front board pin	1
06-32	front board	1
06-33	limit plate	1
06-34	big washer	1